

### ⚠ WARNING

#### CALIFORNIA Proposition 65 Warning

This product contains a chemical or chemicals known to the State of California to cause cancer, birth defects, or reproductive harm.

## Safety

- Always follow the vehicle manufacturer's recommendations relating to system installation.
- Due to the variety of equipment that you can install using the undercarriage, ensure that the gross-vehicle-weight rating (GVWR) is not exceeded at any time. You may need to weigh the vehicle and add ballast or limit the payload of the vehicle to compensate.

## Installation

1. Park the machine on a level surface, shut off the engine, wait for all moving parts to stop, engage the parking brake, and remove the key.
2. Using the plow skid plate as a guide, drill out the 4 holes shown in [Figure 1](#) to 7/16 inch.

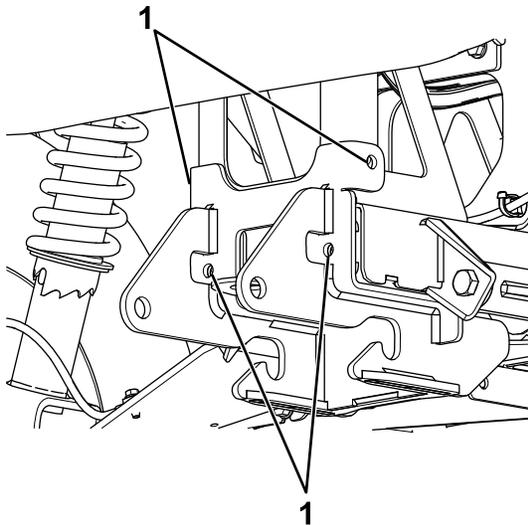


Figure 1

g208134

1. Drill guide holes.

3. Secure the plow skid plate to the vehicle frame through the holes from the previous step using 4 bolts and locknuts, and leave the fasteners finger-tight ([Figure 2](#)).


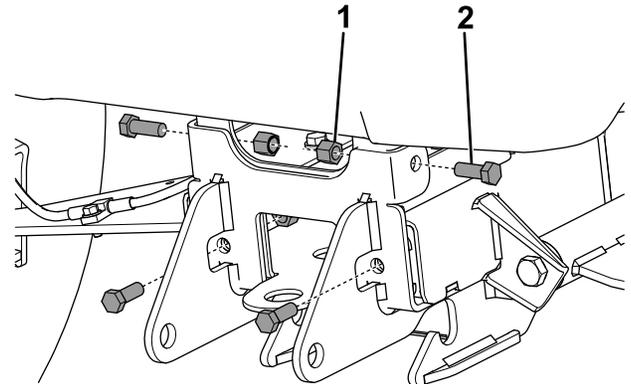


Figure 2

g208135

1. Locknut
2. Bolt


4. Insert the nut plate through the opening in the plow skid plate and vehicle frame, and align it with the holes in the plow skid plate ([Figure 3](#)).

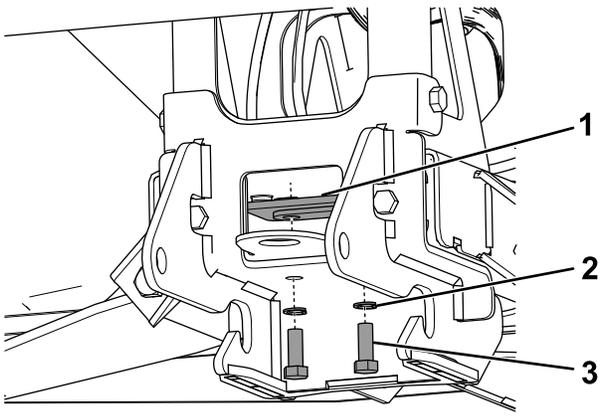

g208136

**Figure 3**

1. Nut plate
  2. Split lock washer
  3. Bolt
- 
5. Secure the nut plate to the plow skid plate using 2 split lock washers and bolts (Figure 3).
  6. Torque all of the bolts to 31 N·m (23 ft-lb).

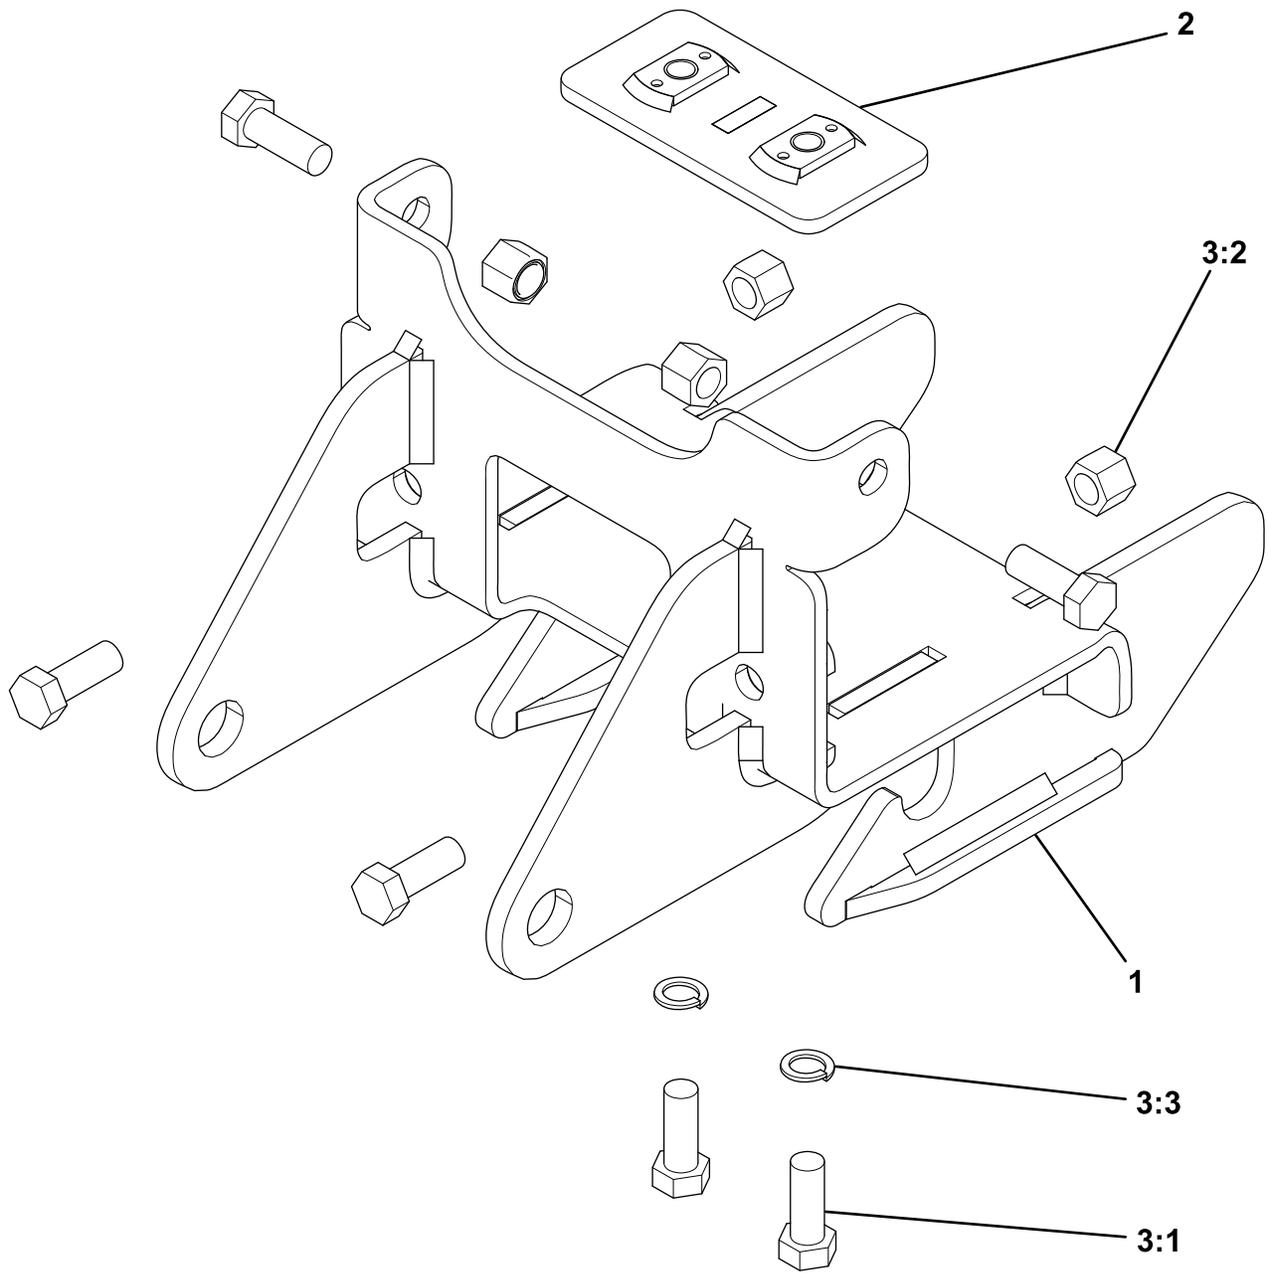

**Parts**

g208133

Ref.	Part Number	Qty.	Description
1	LTA13236	1	SKIDPLATE ASSEMBLY
2	LTA13240-03	1	NUT PLATE
3	HDW13244	1	FASTENER KIT
3:1	HDW01717	6	3/8"-16 X 1" GR5 HEX HEAD BOLT
3:2	HDW01720	4	3/8"-16 NYLON LOCK NUT
3:3	HDW01718	2	3/8" SPLIT LOCK WASHER

**BOSS**  
S N O W P L O W