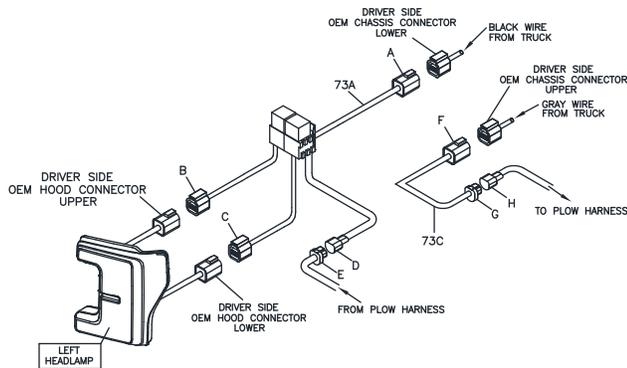


## MSC10230 Headlight Adapter Installation Procedure



**Figure 1.** Ford Super-Duty LED Headlight Adapter Installation G13960

This Installation Procedure is for 2017 & Newer Ford Super-Duty trucks with Halogen Headlights.

Ensure that truck is off and not moving before beginning installation.

1. Locate and disconnect vehicle OEM headlight harnesses on Driver Side of vehicle.
2. Connect plug (A) of Headlight Adapter (73A) into the vehicle driver side lower OEM headlight harness wrapped in black tape.
3. Connect plug (B) of Headlight Adapter (73A) into upper connector of the Driver Side headlight.
4. Connect plug (C) of Headlight Adapter (73A) into lower connector of the Driver Side headlight.
5. Connect black rubber connector (D) of Headlight Adapter (73A) into Driver Side blue plastic connector (E) from Plow Harness.
6. Connect plug (F) of Headlight Adapter (73C) with gray tape into the vehicle driver side upper OEM headlight harness wrapped in gray tape.
7. Connect blue plastic connector (G) of Headlight Adapter (73C) into Driver Side black rubber connector (H) from Plow Harness.

8. Repeat steps 1-7 for Passenger Side Headlight Adapter (73B).

<p><b>Use Standard Orientation For:</b></p> <ul style="list-style-type: none"> <li>*All Ford Models</li> <li>*All 1988 &amp; Newer GM Models</li> <li>*All Dodge Models with 4 Headlight System</li> <li>*All 2003 &amp; Newer Dodge Models</li> </ul>	<p>Standard Orientation</p>
	<p>Reverse Orientation</p>
<p><b>Use Reverse Orientation For:</b></p> <ul style="list-style-type: none"> <li>*1994 – 2002 Dodge Models with 2 Headlight System (9004 Bulb)</li> <li>*1987 &amp; Older GM Models with 4 Headlight System</li> </ul>	

**Figure 2.** Vehicle Option Connector

G10202

9. Locate vehicle option connector. Align the connector so that the wire colors are positioned to match the vehicle it is installed on. This is illustrated in Figure 2.

