

MSC09658 Pedestal Mount Installation Procedure

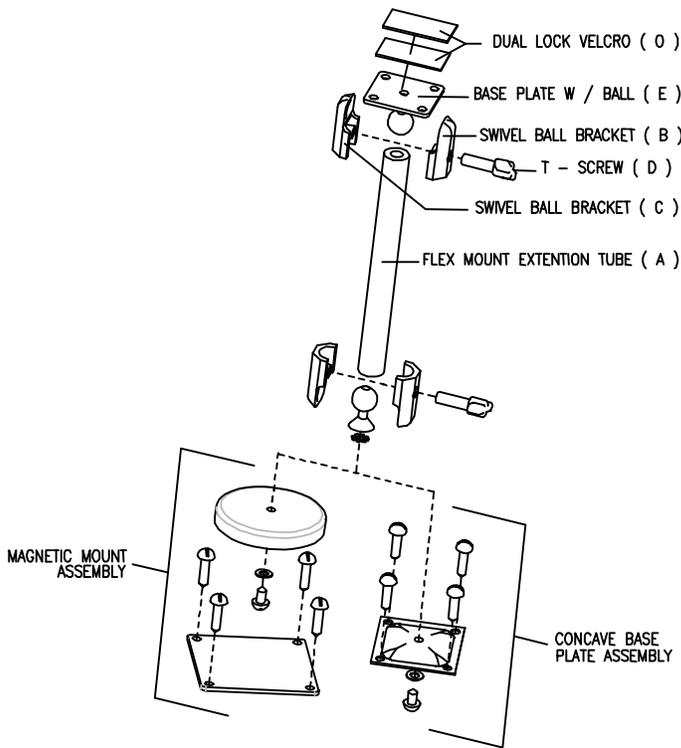


Figure 1 Flex Mount Extension Tube Assembly G10377

Note: This is a general installation procedure and covers multiple configurations.

1. Use T-Screw (D) with Swivel Ball Brackets (B & C) to secure Flex Mount Extension Tube (A) to Base Plate with Ball (E) (fig1).
2. Use the enclosed alcohol wipe to clean a spot on the Base Plate with Ball (E) and back of Hand Held Control (not pictured).
3. Peel off backing on Dual Lock Velcro (O). Apply one strip to Base Plate with Ball (E) and the other to back of Hand Held Control (not pictured).

Note: For best results, Dual Lock Velcro (O) should be applied to a clean dry surface. Do not apply if surface temperature is below 60° F.

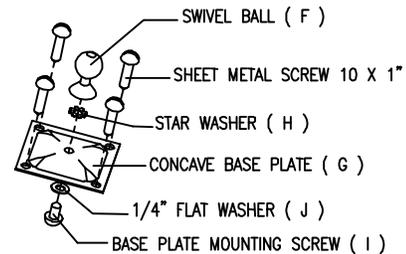


Figure 2 Concave Base Plate Assembly G10378

4. Use Base Plate Mounting Screw (I), Flat Washer (J), and Star Washer (H) to fasten Swivel Ball (F) to Concave Base Plate (G) (fig 2).
5. Repeat step 1 to assemble lower half of Flex Mount Extension Tube (A). Use Concave Base Plate Assembly (fig 2) for a solid floor mount or Magnetic Mount Assembly (fig 3) for a removable mount.

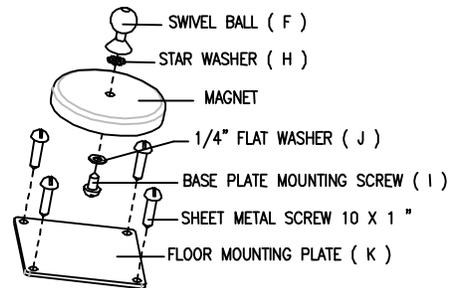


Figure 3 Magnetic Mount Assembly G10380

6. To install Magnetic Mount, repeat step 4 replacing Concave Base Plate Assembly (fig 2) with Magnetic Mount Assembly (fig 3).
7. Concave Base Plate Assembly (fig 2) or Floor Mounting Plate (K) (fig 3) should be mounted directly to the floor using (4) Sheet Metal Screws provided.